


Simple Touch® 15-Channel Remote Top Down Bottom Up and Day/Night Cell Shades

- Operation and Programming Instructions



This Simple Touch® motorized shade is already connected to remote and programmed with Upper and Lower Limits. Option to program “My Favorite Position” followed with the instruction below. Enjoy your new motorized shade!

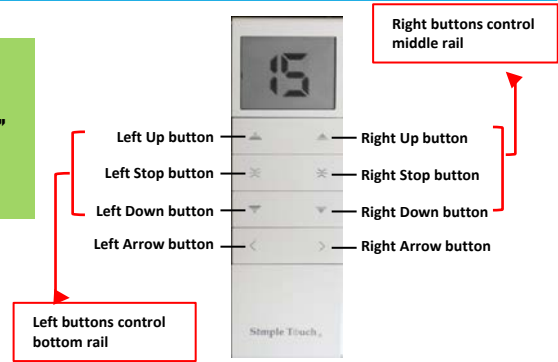

Features and Operation

FEATURES

- This Simple Touch® 15-channel remote works with Top Down Bottom Up Cellular Shade and Day/ Night Cellular Shade.
- Each channel can only control **ONE** motorized shade.
- Channel “0” is designed to control multiple shades. The maximum controlled quantity is 15 shades.
- **Right Up** (▲), **Right Stop** (⊠), and **Right Down** (▼) buttons control middle rail. **Left Up** (▲), **Left Stop** (⊠), and **Left Down** (▼) buttons control bottom rail. Refer image above for more info.

OPERATION

- Click **Left Arrow** (◀) and **Right Arrow** (▶) buttons to switch within channels.
- Click **Up** (▲) or **Down** (▼) buttons to control rails go up or go down.
- Click **Stop** (⊠) buttons to stop the moving of the shade.
- After set up Upper and Lower limits, press either **Up** (▲) or **Down** (▼) buttons for 2 seconds to control both middle and bottom rails at the same time. Click any **Stop** (⊠) button to stop moving.
- Go to Channel “0” to control all the motorized shades connected to this remote.
- After set up “My Favorite Position”, press **Right Stop** (⊠) or **Left Stop** (⊠) button for 3 seconds to control both middle rail and bottom rail to my favorite position.

Programming Instruction


PROGRAMMING FOR MY FAVORITE POSITION (optional setup)

Set Up Bottom rail to My Favorite Position	Step 1. Click Right Arrow or Left Arrow buttons to select the channel. If you only have shade, please stay with channel “1”.
	Step 2. Control bottom rail to the favorite position by pressing Left Up or Left Down buttons.
	Step 3. Click Right P2 button, and then shade jogs once.
	Step 4. Click Left Stop button, and then shade jogs once.
	Step 5. Click Left Stop button again, and then shade jogs twice.
Set Up Middle rail to My Favorite Position	Step 1. Control middle rail to the favorite position by pressing Right Up or Right Down buttons.
	Step 2. Click Left P2 button, and then shade jogs once.
	Step 3. Click Right Stop button, and then shade jogs once.
	Step 4. Click Right Stop button again, and then shade jogs twice.



Simple Touch® 15-Channel Remote Top Down Bottom Up and Day/Night Cell Shades

- Programming Instruction

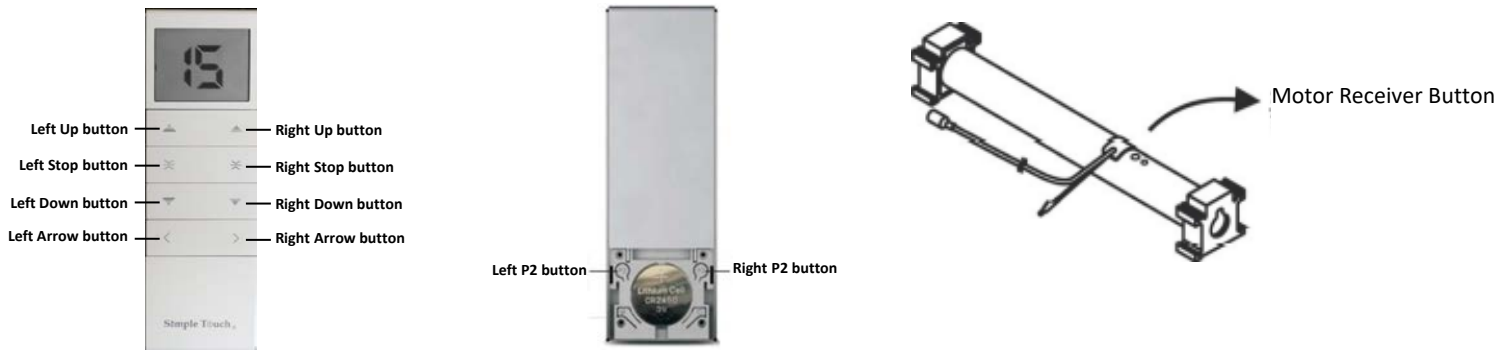

TO REPROGRAM THIS MOTORIZED SHADE, PLEASE FOLLOW THE STEPS BELOW.

Restore factory setting	Step 1. Press the Motor Receiver button and don't release until shade jogs 4 times. This step takes about 15-20 seconds.
	Continue to follow the instruction below to set up Frequency Connection , Upper Limit and Lower Limit .
Frequency Connection	Step 1. Select the channel on the remote with clicking the Left Arrow and/ or Right Arrow buttons.
	Step 2. Press Motor Receiver button for 2 seconds, motor jogs once, and then release Motor Receiver button.
	Step 3. Press Left Stop button on remote for 2-3 seconds, motor jogs twice.
Set Upper Limit	Step 1. Press Right Up button and Left Up button to control both middle and bottom rails going up. Click Stop button when rails hit the headrail.
	Step 2. Press Left Up & Left Stop buttons at the same time for 2-3 seconds, motor jogs twice.
Set Lower Limit	Step 1. Press Left Down button to control bottom rail moving down until it reaches the ordered drop height. Click Left Stop button to stop moving.
	Step 2. Press Right Down button to control middle rail moving down until it hits bottom rail. Click Right Stop button to stop moving.
	Step 3. Press Right Down & Right Stop buttons at the same time for 2-3 seconds, motor jogs twice.
	Step 4. Programming is done.
Program "My Favorite Position" followed with the instruction on page 1 as an option.	

Simple Touch® 15-Channel Remote Top Down Bottom Up and Day/Night Cell Shades


- Care Instruction

Care and Clean

- Wipe the shade periodically with a soft dust cloth or dusting mitt, or vacuum with a lowest speed.

Notes

- Do not spill water to the headrail and the remote.
- Do not clean/ operate the motorized shade with wet hands
- The warranty for your shades does not cover damage caused by improper cleaning.
- Changing the batteries won't change the programming setting.
- The motorized shade is for indoor use only.
- Do not use the motorized shades at the wet area.

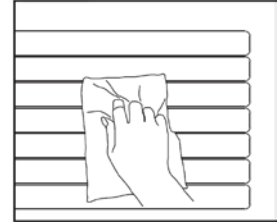

Federal Communications Commission Statement



FCC ID# 2AWSE-STP017WR15

FOR INDOOR USE ONLY

This motorized shade has been tested and found to complete with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This shade generates, uses and can radiate radio-frequency energy. If this shade is not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this shade does cause harmful interference to radio or television reception, which can be determined by turning the shade off and on, correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase separation between shade and receiver.

Connect equipment to an outlet on a circuit different from that to which the receiver is located.

Consult your dealer or an experienced radio/TV technician.

Any changes or modifications to the product that are not expressly approved by HT could void the user's authority to operate this shade. Use of a shielded interface cable is required to comply with the Class B limits of Part 15 of FCC rules. For more regulatory information, see the electronic user guide. HT shall not be liable for any direct, indirect, incidental, consequential, or other damage alleged in connection with the furnishing or use of this information.

 WARNING/ADVERTENCIA	
	Window blind cord can STRANGLE your child. To prevent strangulation, purchase cordless products or products with inaccessible cords.
	La cuerda de la persiana puede ESTRANGULAR a su niño. Para evitar el estrangulamiento, compre alternativas cuerda o productos con cuerdas inaccesibles.